



ZANOTTI Spa
Via M.L. King, 30
46020 - Pegognaga (MN) - ITALY
Tel. +39 0376 5551
Fax +39 0376 536554
info@zanotti.com

Technical specifications

Version 1.1

Model:

MSB225T17F

Class:

Uniblock SB

Technical data

Characteristics	M.U.	Value
Working temperature	°C	+10 ÷ -5
Starting mode		Direct
Voltage	Volt-Ph-Hz	230/1N~/60
Refrigerant		R404A
Defrost		Hot gas
Mass	Kg	75

Compressor

Type		Hermetic
Nominal power	kW	0,8

Condenser

Air flow	m³/h	1400
----------	------	------

Evaporator

Air flow	m³/h	1100
Air throw	m**	4



Power data

Tc °C	Ta °C	P watt	P Kcal/h	V100 m³	V80 m³	V60 m³
10	20	3537	3042	40	36	33
	25	3327	2861	36	33	30
	30	3097	2663	33	30	27
	35	2848	2449	29	26	24
	40	2581	2220	25	23	21
5	45	2296	1975	20	18	17
	20	3130	2692	33	30	27
	25	2887	2483	29	26	24
	30	2697	2319	26	24	22
	35	2521	2168	24	22	20
0	40	2321	1996	21	19	17
	45	2060	1772	18	16	15
	20	2750	2365	27	25	22
	25	2515	2163	24	22	20
	30	2326	2000	21	19	17
-5	35	2156	1854	18	16	15
	40	1983	1705	17	15	14
	45	1782	1533	14	13	12
	20	2339	2012	21	19	17
	25	2161	1858	18	16	15
	30	1998	1718	17	15	14
	35	1841	1583	15	14	12
	40	1681	1446	13	12	11
	45	1507	1296	11	10	9,1


** Use air throw as a base. Air throw is affected by many factors such as height of room, product storage, location of evaporator, etc.

Tc: Coldroom temp. - Ta: External temp.


P: Refrigerant capacity - V: Recommended cold-room volume

Dimensioni - Dimensions - Dimensions
Abmessungen - Dimensiones

SB225/ETL

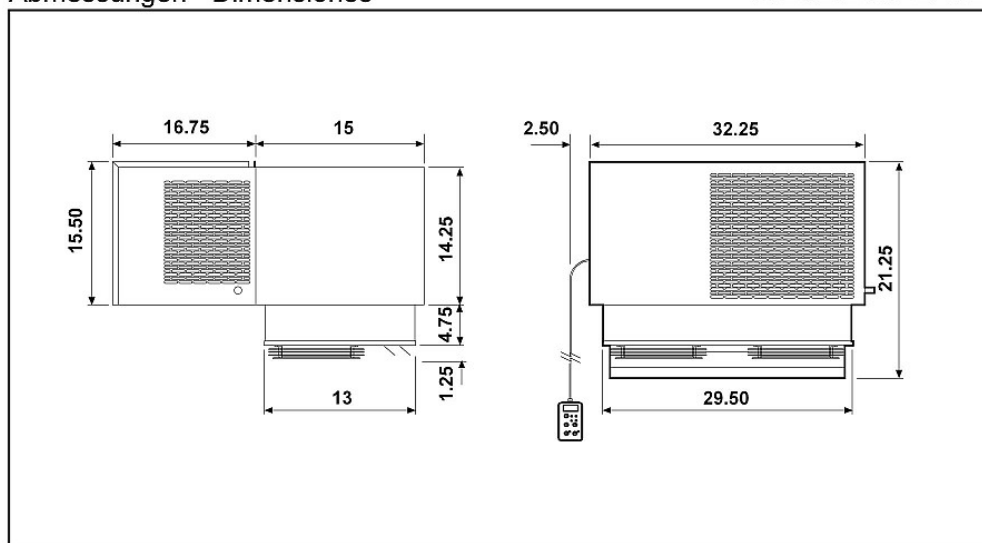


Schema di montaggio - Mounting scheme - Schema de montage
Montageschema - Esquema de montaje

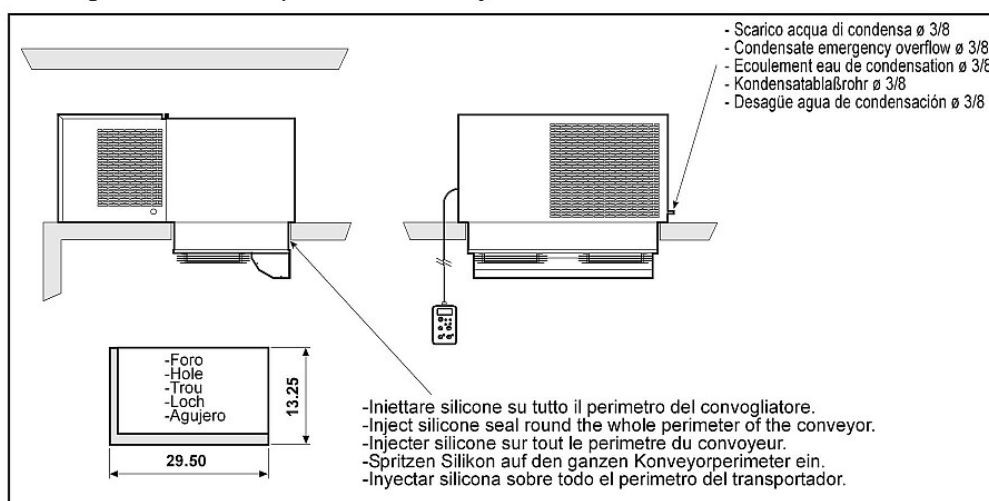

- * Raccomandazioni in sede di installazione e per il controllo fornite sul manuale di installazione
- * To be advised at time of order for factory installation and operating instructions
- * Recommendations au moments d'installations et pour le contrôle fournis sur le manuel d'installation
- * Empfehlungen für die Installationsphase und zur Kontrolle, die im Handbuch zur Installation enthalten sind
- * Por cuanto respecta a recomendaciones de instalación y control ver manual de instalación

Peso e misure imballi - Packing weight and dimensions - Poids et dimensions emballages
Verpackungsgewicht und-abmessungen - Peso y medidas del embalaje

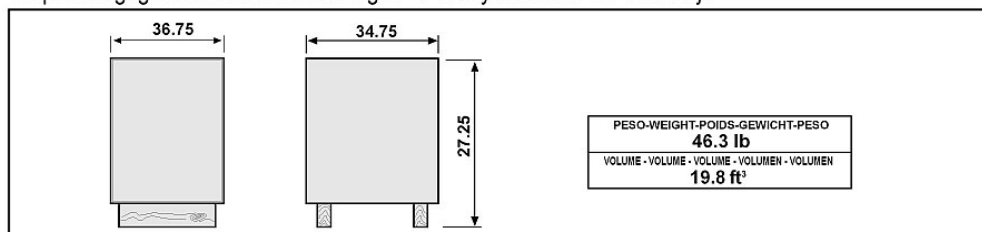

ZANOTTI S.p.A.