



# Slush & Smoothie Machine User Manual

## SSM-180, 280, 420, 560, 52(MINI)

- The product has been designed for indoor use only.  
So do not use it outdoors.
- Before use of the product, be sure to become familiar with this manual.  
Keep the manual in a convenient place for quick and easy reference.
- This manual contains the product warranty card.
- The product design is subject to change for performance enhancement  
without prior notice.

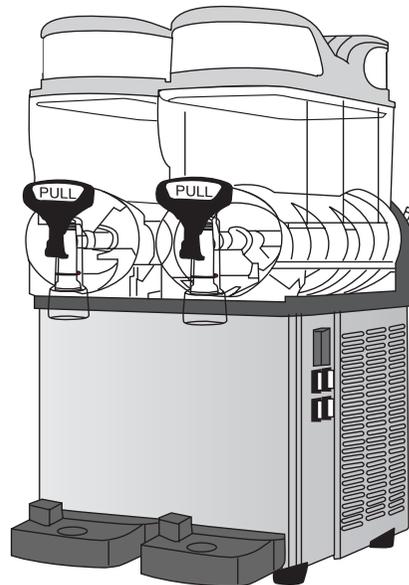

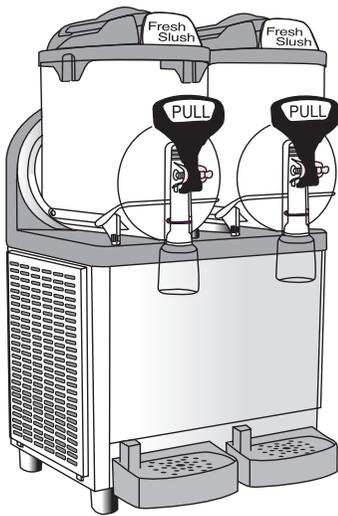

# Contents


---

1.Names of Parts .....	3~7
2.Overview .....	8
3.Safety Signs, Symbols, and Labels .....	8
4.Safety Instructions .....	9
5.Installation Requirements .....	10
6.Safety Cautions for Operation .....	11
7.Operation Procedure .....	12~19
7.1 Controllers	
7.2 Operations	
7.3 Cleaning and sterilization procedure	
7.3.1 Disassembling the product	
7.3.2 Cleaning the product	
7.3.3 Sterilizing the product	
7.3.4 Assembling the product	
7.3.5 Sterilizing the site	
8.Daily Check .....	20
8.1 Repairing the product (by qualified engineer only)	
9.Specifications .....	21
10.Circuit Diagram .....	22~23
11.Before Calling Service .....	24
12.Part List .....	25~33
13.When Receiving Service .....	34
Product Warranty Card .....	35




# 1. Names of Parts

## Exterior and parts

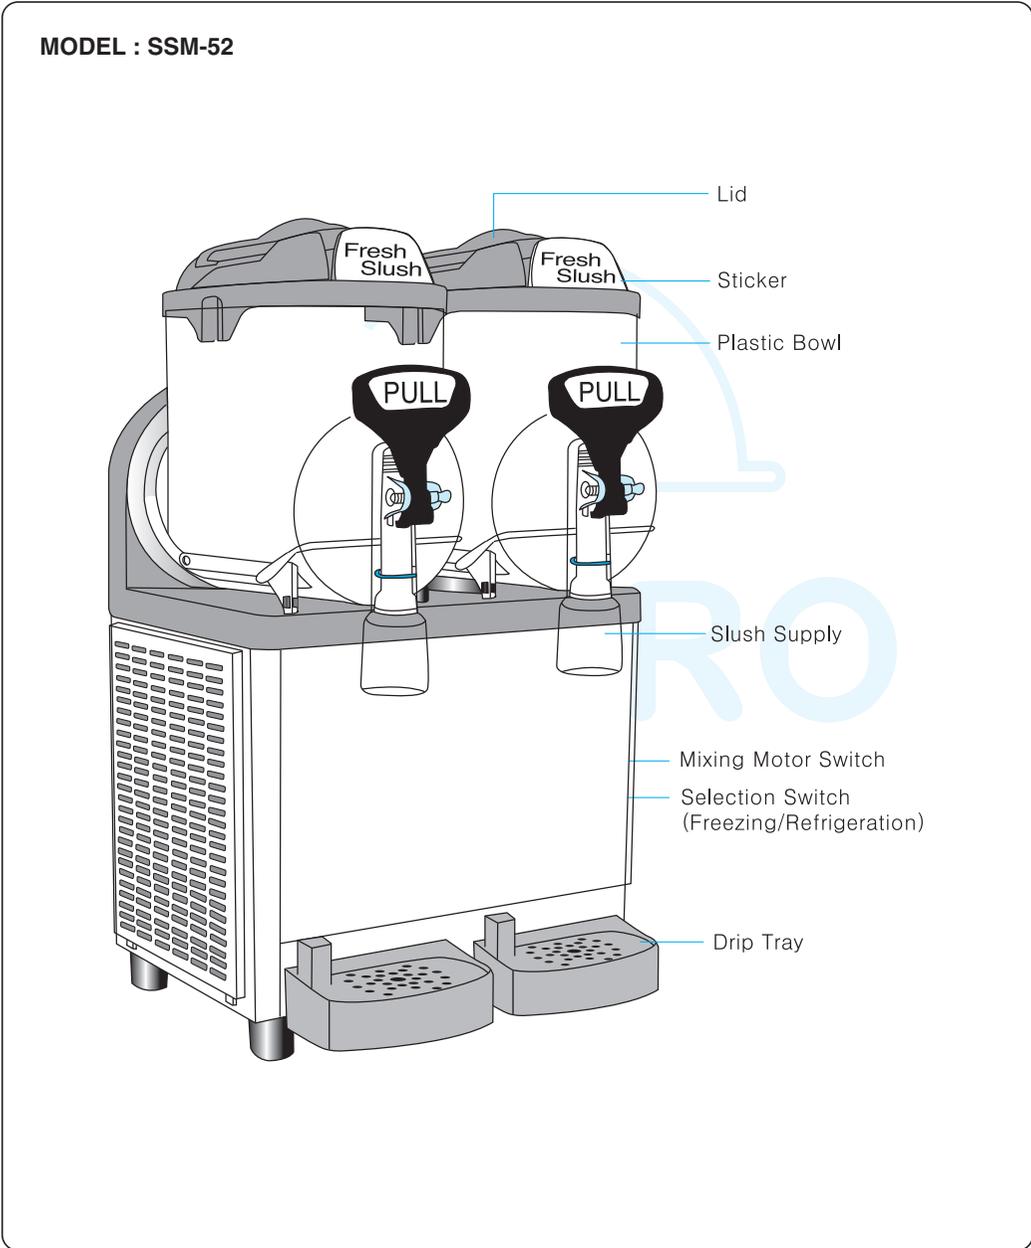




**MODEL : SSM-180**

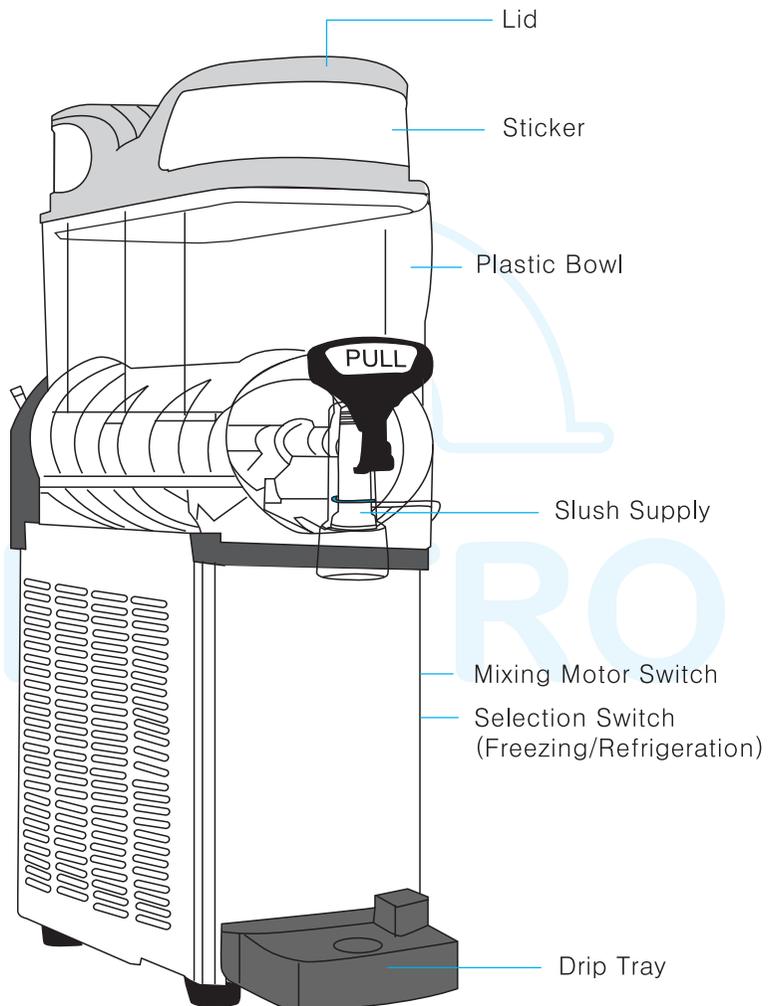




**MODEL : SSM-280**

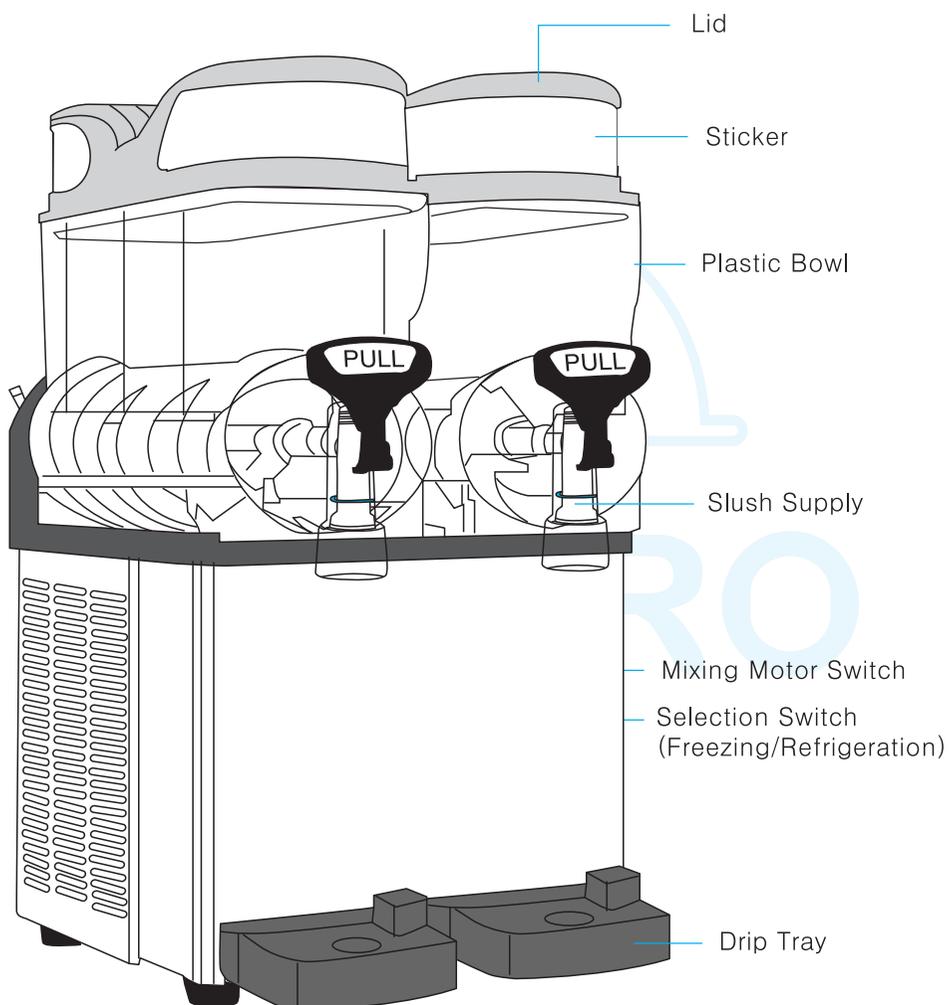




**MODEL : SSM-420**

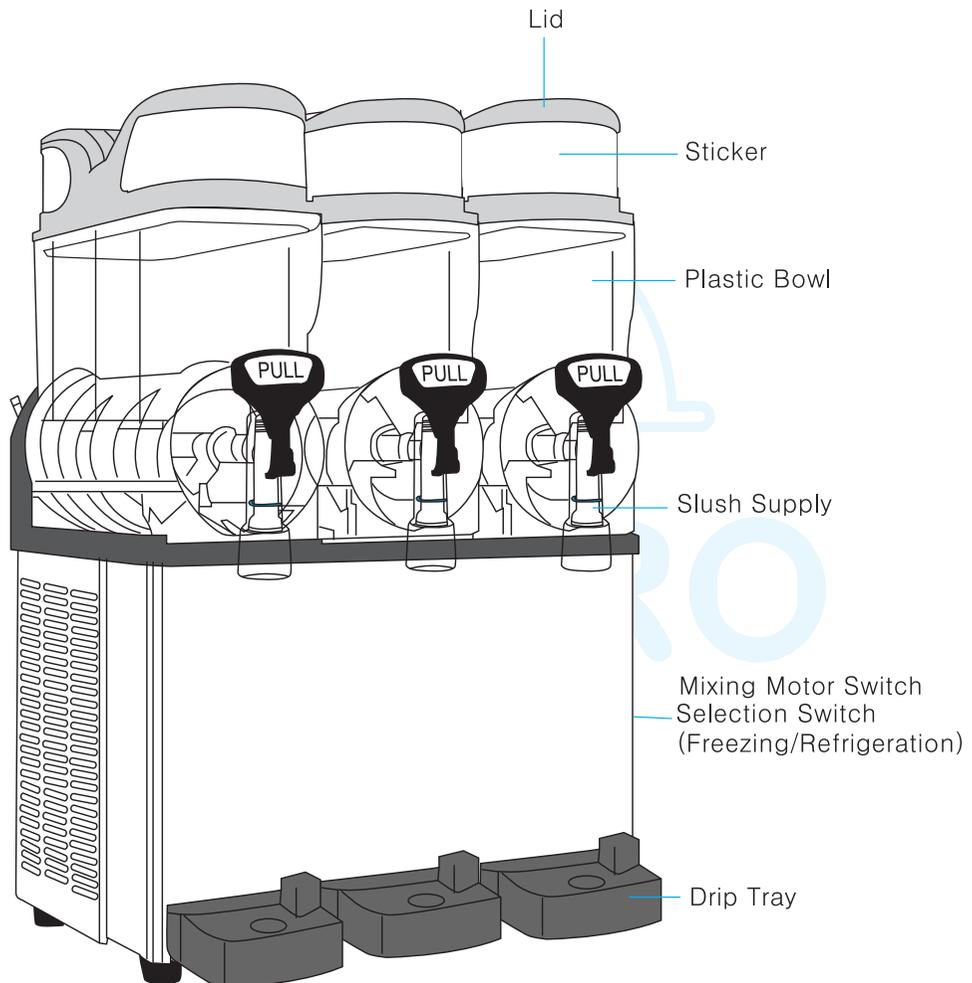



**MODEL : SSM-560**

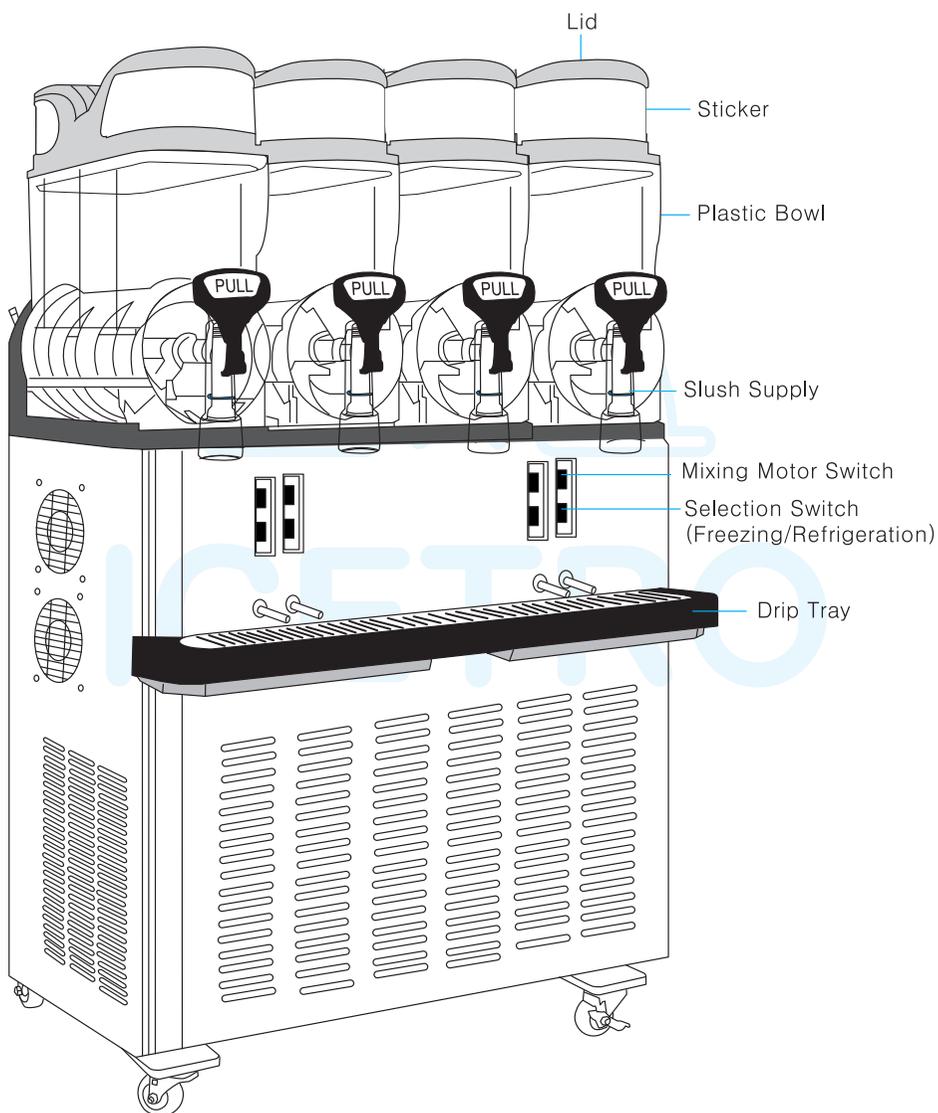

\* SSM-52 : See the part list.





## 2. Overview

---

To become familiar with this product, be sure to read this manual carefully.

This product requires cleaning and maintenance activities as in other machines.

Any disassembly or cleaning mistakes may cause a product failure.

It is highly recommended for the person in charge to have immersion training for activities.

## 3. Safety Signs, Symbols, and Labels

---

The warnings and safety instructions in this manual do not cover all possible conditions and situations.

While operating, moving or cleaning this product, manipulate it carefully based on common sense. If a bad and non-understandable symptom happens, feel free to contact the purchased site or service agency.



This is the safety warning symbol. It is used to warn users of any potential risk of injuries. To evade from the risk of injury or death, comply with the safety requirements for the symbol.



If you neglect this symbol and wrongly use the product, it may cause death or serious injury.



If you neglect this symbol and wrongly use the product, it may cause a potential risk of death or serious injury.



If you neglect this symbol and wrongly use the product, it may cause a potential risk of injury.

Caution

If you neglect this with no caution symbol and wrongly use the product, it may cause a potential risk of property damage.




Important

You must check the electrical rating on the nameplate of the product. The nameplate is attached on the rear of the product. The nameplate specification has priority over information in this manual. The electric circuit diagram of the product is attached inside of the panel. In addition, the product specification is subject to change without prior notice.




## 4. Safety Instructions

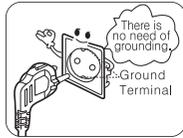

- ⚠ Be sure to use the grounded consent.  
It may cause a failure or electric shock.




- ⚠ Do not pull off the power plug.  
It may cause a failure or electric shock.

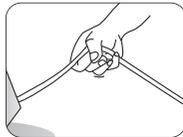


- ⚠ Do not move the product by pulling the power plug.  
It may cause a failure or electric shock.



- ⚠ Do not contact the power plug with wet hands.  
It may cause an electric shock or fire.

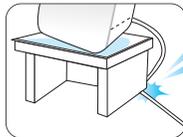


- ⚠ Do not forcibly bend the power plug or place any heavy material on it.  
It may cause an electric shock or fire.

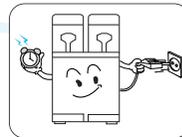


- ⚠ When the power plug is removed from the outlet, insert it after 5 minutes.  
Otherwise, It may cause a product failure.




- ⚠ Remove water or dust from the power plug and insert it fully into the outlet.  
It may cause a fire or electric shock.

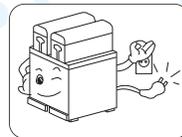


- ⚠ When repairing the product or replacing the parts, remove the power plug from the outlet.  
It may cause an electric shock or fire.

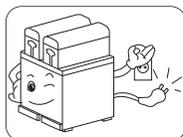

- ⚠ When not using the product for a long time, remove the power plug from the outlet.  
It may cause an electric shock or fire.

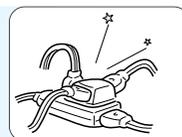

- ⚠ Do not connect multiple products to a single outlet.  
It may cause a fire.

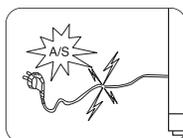

- ⚠ When the power plug is damaged, do not replace it arbitrarily and contact the service agency.  
It may cause an electric shock or fire.



- ⚠ Do not connect the power plug arbitrarily or nor modify it.  
It may cause an electric shock or fire.



Caution!


- Use this product as described in the user manual.
  - If you do not follow the instructions, it may cause an electric shock or property loss.
  - When transferring the product to another person, transfer the user manual also.
  - Before supplying power, check whether the voltage is the same as the one of the nameplate.

According to applicable electric code regulations and machine specifications, ground the product and connect to the single phase power. If the product has no plug, install the grounded plug to meet at least 15 A 250 V (220 to 230 V, 50 to 60 Hz). For directly connecting the product to the main power, connect the power cord to the 2 pole circuit breaker. Never use the extension cord with no grounding.







## 5. Installation Requirements

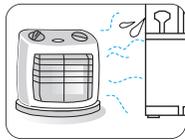


- ⚠ Do not install the product near the heat generating source.  
It may cause a fire.

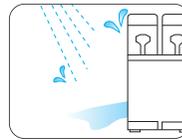


- ⚠ Do not install the product in a humid, dusty, or water (e.g. rain) splashing place.  
It may cause an electric shock or fire.

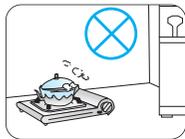


- ⚠ Do not install the product near combustible gases or inflammable materials.  
It may cause a fire.

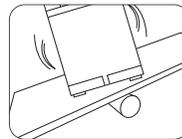


- ⚠ When moving the product, be careful not to slip and fall.  
It may cause an injury or product damage.

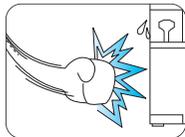


- ⚠ Do not forcibly apply force or shock to the product.  
It may cause damage to the product.

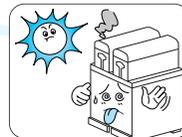


- ⚠ This product is for indoor use only. So install the product inside the house.

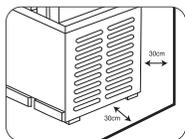


- ⚠ Keep at least 30 cm distance for the side and rear of the product.

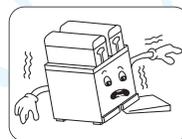


- ⚠ Do not install the product on a weak or uneven floor.  
It may cause vibration and noise.

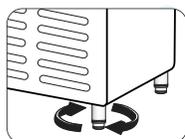

- ⚠ Adjust the vertical balance of the product not to shake and then adjust the horizontal balance.  
Firmly fix the product.

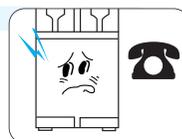

- ⚠ Check any damage of the product.  
If found, contact the delivery agency to request claims on it.

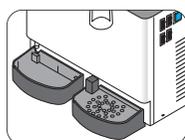

- ⚠ The drain hose is located on the top of the drain box.




### Caution!


This product is for indoor use only. So do not install the product outdoors. Inevitably, when the product is installed outside, prepare a shade to block direct sunlight, rain, wind, and dust for sanitary control and optimal performance. Install the product in the place where you can easily manage it to prevent robbery and loss by dangerous play.




## 6. Safety Cautions for Operation

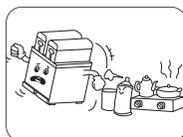


- ⚠ Keep away any flammable materials.
  - ▶ It may cause a fire or explosion due to electric spark.

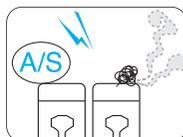


- ⚠ If the product makes heavy noise or does not operate properly, remove the power plug and contact the service agency.
  - ▶ It may cause an electric shock or fire.

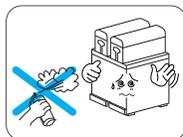


- ⚠ Do not use any flammable spray such as pesticide and air freshener.
  - ▶ It may cause a fire.

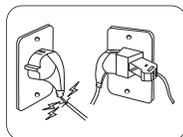


- ⚠ Check the supplied power.
  - ▶ When the PVC coating of the power cable is stripped off or the shunt socket is used, it may cause a fire.

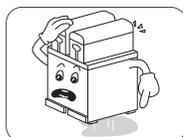

- ⚠ Operate the product in a non-humid place.
  - ▶ In a humid place, the product easily gets rusty or has an electric leak.
  - ▶ If the floor gets humid, wipe it with soft cloth.

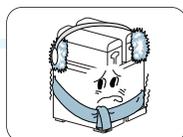


- ⚠ Do not use the product in the ambient temperature of 5°C or below for a long time.
  - ▶ It may cause a product failure.

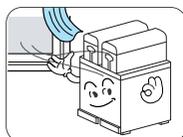

- ⚠ Use the product in a well vented place.
  - ▶ Gas or smoke can discolor the surface of the product.



- ⚠ Do not spray water and wipe the product with a clean wet towel.
  - ▶ If you directly spray water, it may cause an electric leak or product failure.

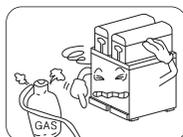


- ⚠ Be cautioned of gases!
  - ◆ When gas leak happens, do not touch the product.
  - ◆ If you open the door or remove the power plug, it may cause an explosion due to spark.
    - ▶ Do not touch the product.
    - ▶ Fully close the gas burner.
    - ▶ Open the window for ventilation.




- ⚠ For food sanitation, clean and sterilize the product every day
  - ▶ Before cleaning, remove the power plug from the outlet.




- ⚠ Do not forcibly apply force to the slush supply lever nor hang on it.
  - ▶ It may cause damage to the product.

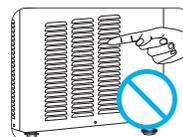

- ⚠ Do not insert your finger or other materials into the panel rubber or the slush supply.

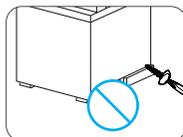

- ⚠ Do not operate the product while all panels are not well fastened enough.

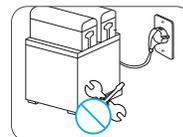

- ⚠ When the product is not separated from the power supply, do not clean the product nor remove the canister, spiral or panel.



### Caution

While operating the product, do not hold the product using the canister or evaporator drum. The manufacturer assumes no responsibility for any damage caused by careless handling.





## 7.Operation Procedure

---

- ① Clean and sterilize the product according to the instructions in this manual.  
See “7.3 Cleaning and sterilization procedure.”
- ② Fill up the liquid material up to the level specified on the canister. Do not overfill it.  
The optimal quantity (in liter or gallon) is written on the surface of canister.
- ③ When diluting the liquid material, fill water into the canister first and pour the liquid material for dilution. In case of natural materials, do not make the slush supply get clogged up.
- ④ For optimal performance, use the base that has been designed for use in the slush machine.  
The base contains the sugar level of 34° (Baume) that is corresponded with 64° (Brix).  
In case of soft drinks, dilute the base 1 to 5 or 5.5 using water.  
In some cases, for both granita and soft drink recipes, you must follow the directions from the syrup manufacturer. If natural juices (e.g. lemon, orange) are used together with non-sugar material (e.g. coffee), 150 to 200 g of sugar per liter must be dissolved.



Caution!

- Food or edible materials must be used in the product.
- When using the granita (smoothie, slush) mix, be sure to have at least 13% of sugar level (Brix).

- ⑤ In case of using the liquid material, keep the following instructions:
  - After mixing the one liter of liquid material (juice pack with 50% of sugar level) with four liters of water, fill the mixed liquid in the material box.
  - Note that when any machine failure occurs due to use of liquid material or powder, the manufacturer assumes no responsibility.
  - In case of soft drinks (1.5 liters of fruit juices bottled in PET plastic) that can be easily purchased, fill three of bottles (4.5 liters) in the material box. (in case of 13 to 15% of sugar level) (e.g. orange soda, fanta, etc.-soft drinks including 10% of fruit juices)
  - Do not use low calorie drinks.
  - Do not use fruit nectar that includes fruit particles.
- ⑥ Set the control switch as described in “7.1 Controllers.”
- ⑦ When the thickness of granita (smoothie, slush) reaches the optimal value, freezing automatically stops. So always keep the product turned on. The spiral keeps rotating.
- ⑧ In case of using other materials such as sweet rice drink, contact the service agency or distributor for inquiry.




Caution!

This product must not be used by the persons with poor mental or physical condition, or the persons without experience or knowledge (including children). If those persons use the product, a responsible person must manage the use of the product. Guide children not to play with the product.




## 7.1 Controllers

The product is equipped with the power switch. Canisters operate by each individual switch. You can use both soft (refrigeration) drinks and granita (smoothie, slush). In the refrigeration mode, the temperature of the drink is controlled by the thermostat. In the freezing mode, the viscosity of the mixed material is controlled by the bolt on the rear of the product.  
(For more information about the temperature and viscosity settings, see “7.2 Operations.”)  
All switches are located on the right panel. (See Figure 2.)

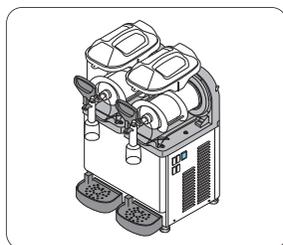

(Figure 2)

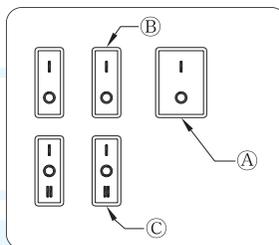

(Figure 3)

The switches in Figure 3 function as follows:

### Ⓐ Power Switch

| POSITION : All functions and switches are activated.  
○ POSITION : The fan motor operates.

○ POSITION : All functions are deactivated.

### Ⓑ Supply Switch

| POSITION : The spiral motor operates and the “C” switch is activated.

○ POSITION : The fan motor is turned off.

### Ⓒ Freezing/Refrigeration Switch

| POSITION : The product operates in granita (smoothie, slush) mode.

○ POSITION : The freezing and refrigeration functions are deactivated.

|| POSITION : The product operates in soft (refrigeration) drink mode.

### To operate the product:

① Place the power switch to I.      ② Place the supply switch to I.

③ Set the freezing/refrigeration switch as follows:

- Place the switch to I for making granita (smoothie, slush).
- Place the switch to II for providing soft (refrigeration) drink.

### To operate the lighting: (excluding SSM-52)


- If you turn on the lighting, the bulb inside the cap of the material box lights.
- Otherwise, check whether the spring cord on the top of the cap is properly inserted.
- If the life of the lighting is expired, remove the bottom panel of the cap and replace the lamp (12 V & 21 W). (If the life of the lamp is expired, replace it with the provided part.)





## 7.2 Operations

- ① Adjusting the granita viscosity: The optimal granita viscosity is set by the manufacturer. To change the viscosity, rotate the control bolt on the rear of the product as follows: (See Figure 4.)
  - To make watery granita, rotate the control bolt to the right (clockwise).
  - To make thicker granita, rotate the control bolt to the left (counter-clockwise).

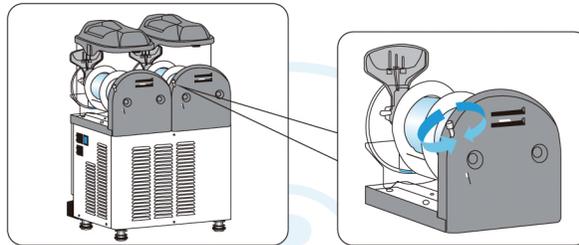

(Figure 4)

- ② Adjusting the drink temperature: The optimal temperature is set by the manufacturer. For setting it again, rotate the temperature controller inside the rear panel as follows:
  - To lower the temperature, rotate it to the right (clockwise).
  - To increase the temperature, rotate it to the left (counter-clockwise).



Important

The drink temperature is controlled by the thermostat, only when the freezing/refrigeration switch is located in "II" (soft drink mode).

- ③ The granita forming time is affected by various factors such as ambient temperature, initial material temperature, sugar level (Brix level) and viscosity setting. Though the conditions are the same, the forming time may vary depending on the canister.
- ④ To reduce the granita forming time and increase the productivity, it is recommended to use the refrigerated materials.
- ⑤ To reduce the granita forming time and increase the productivity, when the remaining material level drops below half, fill the material in the canister.
- ⑥ To preserve the material safely, be sure to operate the product in soft drink mode. To leave the material in the canister during all night without refrigeration, operate the product for at least one hour while the freezing/refrigeration switch is in II before switching off the product. It can prevent forming lumps of ice that can give damage to the spiral and motor.



- ⑦ Before operating the product again, check whether lumps of ice have been formed. If any lumps of ice are in the canister, remove them before switching on the product. If you operate the product in refrigeration mode during all night, it can prevent accumulation of the condensed ice
- ⑧ When the granita is in the canister, do not turn off the slush supply switch. It is because hard ice can form if the spiral does not rotate. If you turn on the slush supply switch at this time, the spiral and motor can have damage. Therefore, turn on the slush supply switch after melting the frozen granita.
- ⑨ The product has the shaft so that the gear motor (outside the canister) can drive the spiral (inside the canister).
- ⑩ The product must be located in a well vented place. If the temperature of the product is hot, check whether there is any heat generating source, or air flow through the panel with a hole is blocked by the wall or box. Keep at least 30 cm distance between the product and other materials.

## 7.3 Cleaning and sterilization procedure

- ① To maintain optimal taste and guarantee the maximum product performance, periodically perform cleaning and sterilization. Only the procedural instructions are provided here.
- ② Before disassembly and cleaning, be sure to remove all materials from the product. For this, follow the procedure below.
  - Place the power switch to I.
  - Place the freezing/refrigeration switch to O.
  - Place the containers beneath each slush supply and extract all materials from the canisters.
  - Place all control switches to O.

### 7.3.1 Disassembling the product



Warning


Before disassembly and cleaning, remove the power plug to block power supply.

- ① Remove the cover of the canister.






- ② Lift the front of the canister to unlock the latch (Figure 5) and pull out the canister to the front. (See Figure 6)

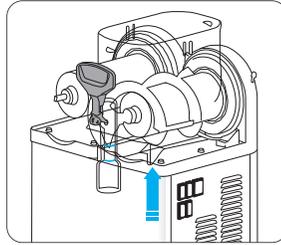


(Figure 5)

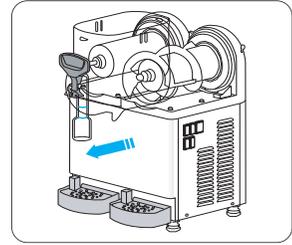


(Figure 6)

- ③ Remove the spiral by pulling out (Figure 7) and remove the packing cushion. (See Figure 8)

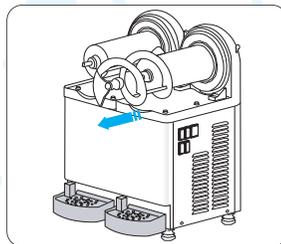


(Figure 7)

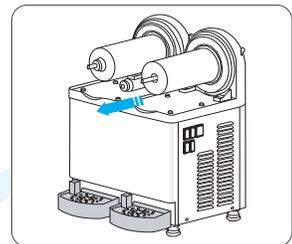


(Figure 8)

- ④ Remove the rubber cushion. (See Figure 9).

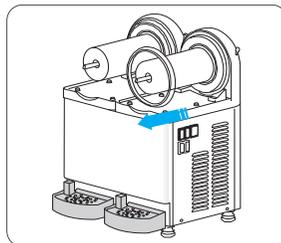

(Figure 9)

- ⑤ Remove the slush supply as shown in the figure. (See Figure 10).

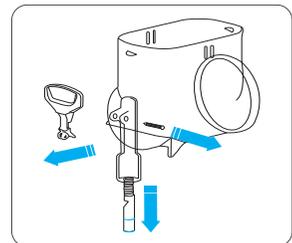

(Figure 10)

- ⑥ Lift the drip tray and pull it out, and empty the remaining water.



## 7.3.2 Cleaning the product



Warning

Never clean the parts in the dish washer.

- ① Prepare the solution mixed with five liters of warm water and kitchen detergent.  
Do not use a strong detergent.
- ② After inserting the mixed solution that does not harm the food, turn on the slush supply switch to extract the solution.
- ③ Frequently empty the remaining materials in the material box and drain box and clean them.



Caution

Turn off the freezing switch.  
It may cause spiral freezing and motor failure.



FREEZE  
STOP  
REFRIGERATION



Warning

In order not to give damage to the product, use the washing detergent for cleaning plastic parts.

- ④ Use the proper brushes to clean the disassembled parts using the washing detergent.




Caution

When cleaning the product, be careful not to insert water in the electrically running parts. It may cause an electric shock or product failure.


- ⑤ Do not spill any liquid on the cover of the motor that is on the rear of the product.
- ⑥ Likewise, use a soft bristle brush to clean the evaporator's cylinder.
- ⑦ Use clean cold water for cleaning the parts.
- ⑧ Be sure to clean the filter.

As shown in the figure, on a monthly basis, open the cover of the condenser, clean the filter with lukewarm water (about 25°C) or neutral detergent solution, dry it, and attach it back to its original position. If ventilation is not made due to accumulated dust, slush is not smoothly formed and machine failure may follow. When the troubles are caused by careless use or user faults such as no filter cleaning, you can get a charged service.

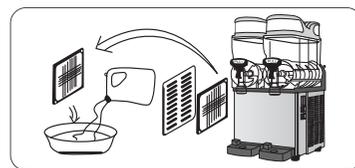

### [ Cleaning the condenser ]

1. Separate the SIDE PANEL L
2. Use a vacuum cleaner or hand cleaner to remove dust from the condenser

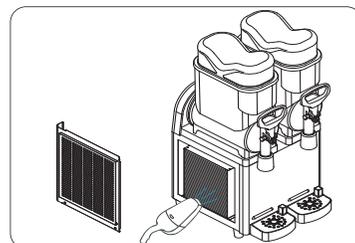




### 7.3.3 Sterilizing the product

Sterilization is performed before operating the product. After sterilization, do not leave the product for a long time.

- ① Wash your hands with an anti-bacterial soap.
- ② According to the food safety regulations and manufacturer specifications, prepare five liters of warm (45 to 60°C) sterilization solution (dilute a spoon of chloride condense liquefaction or sodium chlorate with two liters of water (100 ppm)).
- ③ Soak the parts in the sterilization solution for five minutes.
- ④ Place the sterilized parts on a clean and dry place for drying them.
- ⑤ Wipe all the surfaces of the product.
- ⑥ Do not spill any liquid on the cover of the motor that is on the rear of the product.

### 7.3.4 Assembling the product

- ① Attach the drip tray to its original position.
- ② Paint two piston rings and spiral with the grease provided by the manufacturer or the approved edible grease. (See A and B in Figure 11.)
- ③ Attach the slush supply in the reverse order of disassembly. (See Figure 10.)

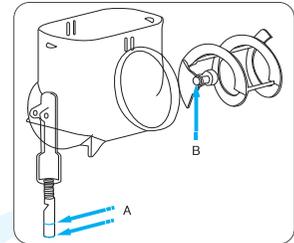


(Figure 11)

- ④ Attach the rubber cushion.

**Caution :** Be sure for the wide border of the gasket to face the wall.

(See Figure 12).

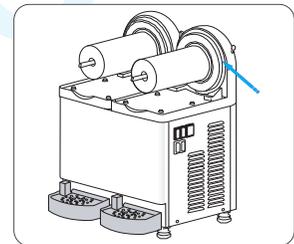


(Figure 12)


- ⑤ Attach the packing cushion and spiral. (See Figure 13.)

**Caution** Before attaching the packing cushion, paint the inner part with edible grease.

After assembly, paint the outer area with edible grease.

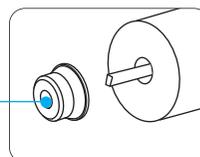


Packing Cushion

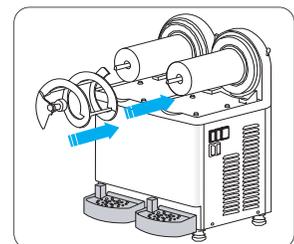

(Figure 13)



- ⑥ Push the canister fully into the canister to fix in the packing cushion and fixing latch.  
(See Figure 14).

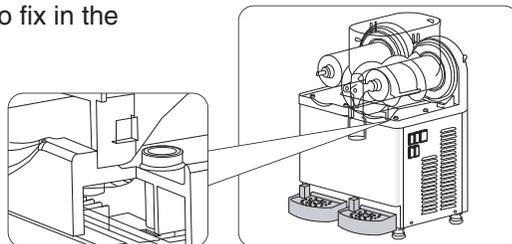

(Figure 14)

- ⑦ Use fresh material to remove the remaining sterilization solution on the surface of the canister.  
Afterwards, do not rinse the product.



To reuse the product after a long time, paint the packing cushion with edible grease as in ⑤. Otherwise, noise may be heard from the product.  
For correction, you have to get a charged service.

### 7.3.5 Sterilizing the site

The site sterilization can be performed additionally after parts sterilization but it cannot replace the parts sterilization.

- ① According to the food safety regulations and manufacturer specification, prepare five liters of warm (45 to 60 °C) sterilization solution (remaining chloride 100 ppm).
- ② Fill the solution in the canister.
- ③ Use the proper brushes to wipe the surfaces projected above the solution level and the lower area of the canister cover with the solution.
- ④ Attach the canister cover and operate the product for mixing the solution for about two minutes. Drain the solution from the canister.
- ⑤ Use fresh material to remove the remaining sterilization solution on the surface of the canister. Afterwards, do not rinse the product.





## 8. Daily Check

---



Warning

If the power cord is damaged, only the qualified person must replace it to prevent electric shock.

- ① Daily check: It checks any possible leak through the packing or gasket. If leak happens through the packing or gasket even though properly assembled, check the use of improper grease or parts wear. If necessary, replace parts.



Caution

- Before disassembly and cleaning, remove the power plug to block power supply.

- The pin of the condenser is very sharp. Be careful while cleaning it.

### 8.1 Repairing the product (by qualified engineer only)

- ① Yearly repair: Remove the panel and clean the inner parts including the base, side panels, and condenser.
- ② To prevent damage to the product, paint all plastic parts with the grease provided by the manufacturer or the grease proper for cleaning the plastic parts.



## 9. Specifications

Model Name	SSM-180	SSM-280	SSM-420	SSM-560	SSM-52 (MINI)		
Product Name	Slush & Smoothie Machine						
Body	SIZE(W×D×H)	213×480×832	400×480×895	600×480×895	900×480×1350	417×386×705	
	Case	Stainless Steel					
	Insulation	Urethane Foam					
Electric Feature	Power Consumption	V	110 / 220	110 / 230 / 230		220 / 230	110 / 220 / 230
		Hz	60 / 60	60 / 60 / 50		60 / 50	60 / 50
	Rated power	W	440 / 320	1270 / 1020	1449 / 1350	1000x2EA	500
	Current Consumption	A	5.8 / 1.8	110.5 / 5.0	12.6 / 6.4	5.0Ax2EA	3.5A
	Geared Motor		1EA	2EA	3EA	4EA	2EA
	Fan Motor		9W or below	16W	16W~34W	16W~34W x 2EA	10W
Freezing	Compressor	Fully Closed					
	Condenser	Pin tube type					
	Evaporator	Tube-launched Drum Type					
	Cooling Type	Capillary Tube					
	Refrigerant	R-134a	R-404A	R-404A	R-404A	R-134A	
Miscellaneous	Proper Material Quantity	10ℓ × 1TANK	10ℓ × 2TANK	10ℓ × 3TANK	10ℓ × 4TANK	5ℓ × 2TANK	
	Control Method	Torque and TC Control					MICOM Control
	Provisions	Manual-1EA Edible Grease -1EA Rubber Ring -1EA Rubber Packing-1EA Lamp -1 EA	Manual-1EA Edible Grease -1EA Rubber Ring -2EA Rubber Packing-2EA Lamp -2 EA	Manual-1EA Edible Grease -1EA Rubber Ring -3EA Rubber Packing-3EA Lamp -3 EA	Manual-1EA Edible Grease -1EA Rubber Ring -4EA Rubber Packing-4EA Lamp -4 EA	Manual-1EA Edible Grease -1EA Rubber Ring -2EA Rubber Packing-2EA	
	Operation Environment	Ambient Temperature : 10~38℃					



Important


The raw material quantity may vary by the material type and sugar content. If the slush touches the cover, reduce the quantity of the raw material.






# 10. Circuit Diagram

## SSM-52

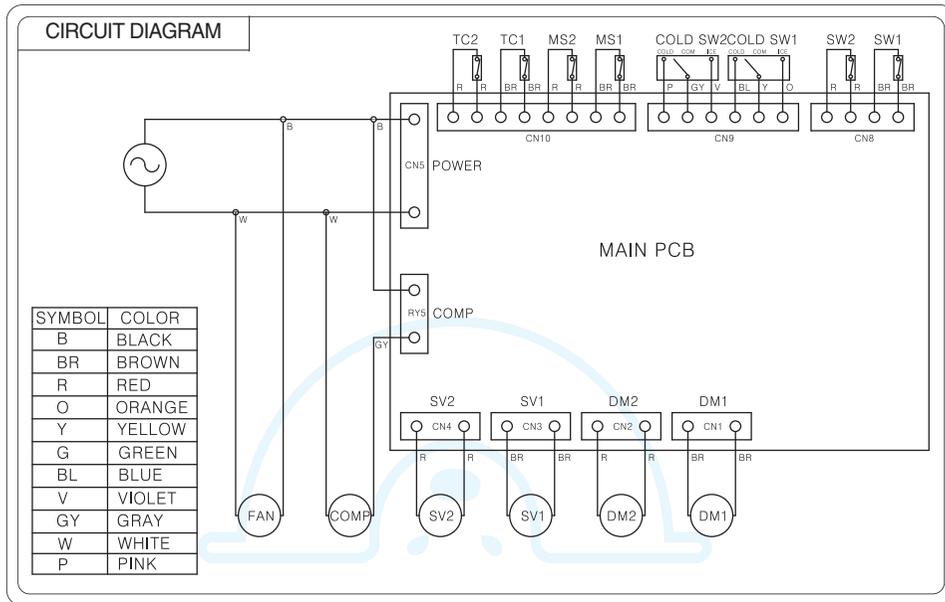


## SSM-180

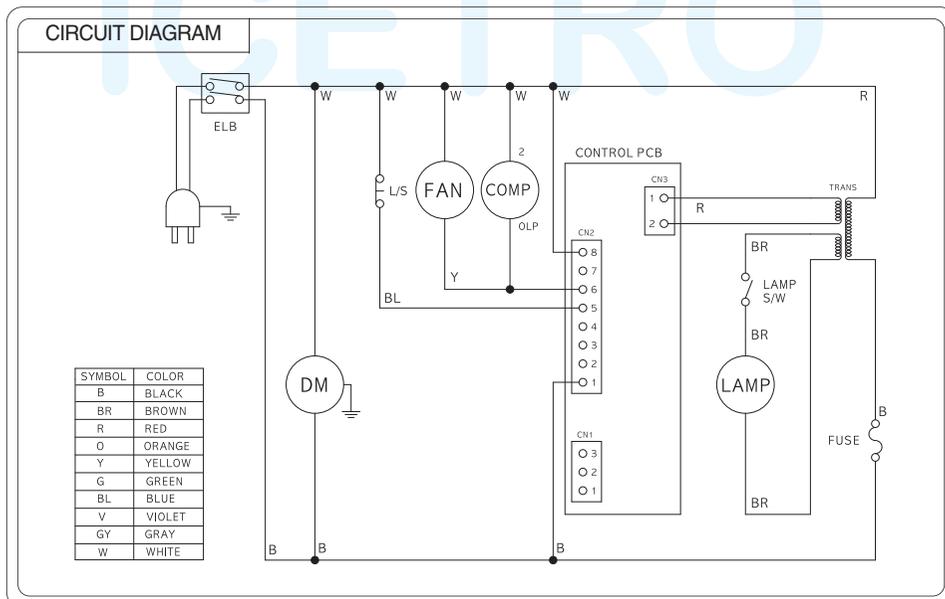




## SSM-280

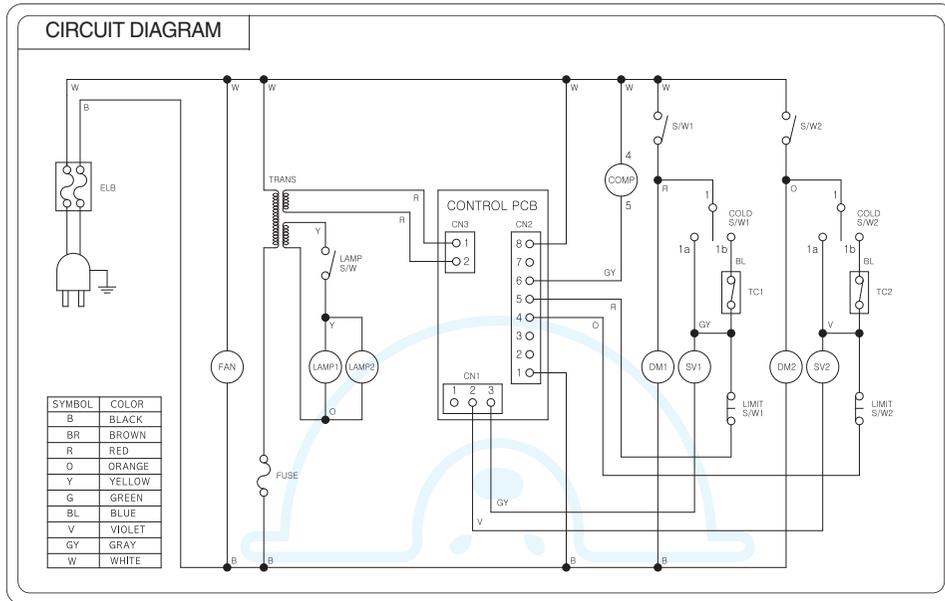

## SSM-420

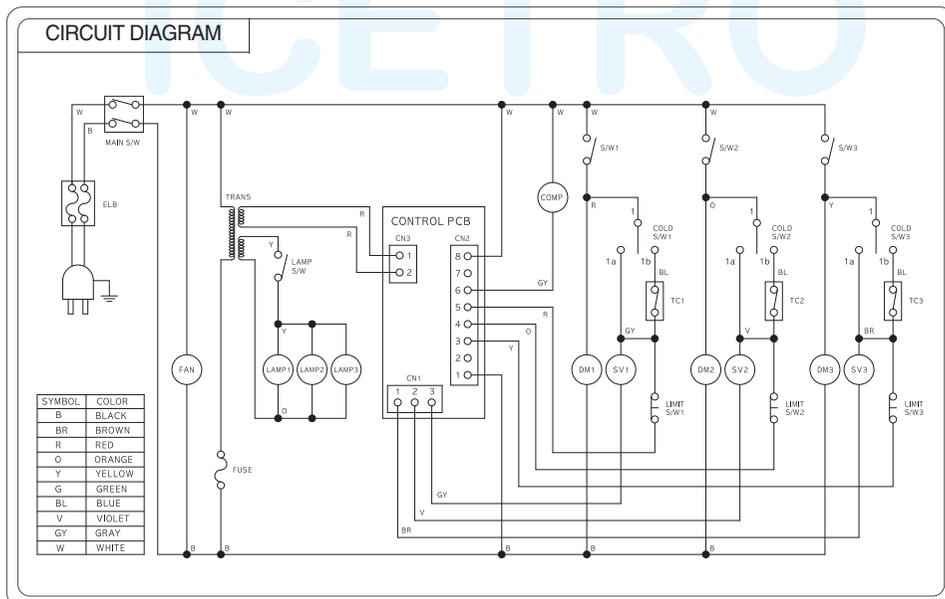

SSM-560: Two SSM-280s are applied






## 11. Before Calling Service

Failure	Cause	Action
If power is not supplied	1. Power is not supplied from the outlet.	1. Check the outlet connection status.
	2. The power switch is turned off.	2. Turn on the power switch.
	3. The fuse is disconnected.	3. Replace the fuse.
The spiral rotation is stopped. (Noise is generated.)	Low sugar level in the material. (The spiral is frozen.)	Turn off the power switch and melt the ice. (At this time, do not use a sharp tool such as ice pick.) After that, retry.
	Deformation of the spiral and canister. (It can happen when hot water (80°C or above) is used while cleaning and sterilizing the product.)	Replace the spiral and canister.
	Spiral rotation shaft wear (wear of the part that meets the spiral rotation shaft in the middle of the cylinder)	Replace the spiral.
The material does not come out from the slush supply.	The material level is too low.	Fill the material up to three liters.
	The material is too much frozen.	Adjust the control screw on the cover of the motor (on the rear of the product).
The granita is not formed.	1. The material level is too low.	1. Replace the material (sugar level: 13 to 15%)
	2. The sugar level is set to Weak (Level 1).	2. Connect the cord of the cap.
	3. It is set to Stop or Refrigeration.	3. Set it to Freezing.
While operation, water flowing sound is heard.	The sound is heard when the refrigerant flows.	Normal operation
It is too much frozen.	The freezing switch is turn on continually.	Adjust the freezing and refrigeration switch to have optimal temperature. In this case, set the switch to Refrigeration or Stop.



## 12. Part List

### SSM-52 IN CASE ASSEMBLY

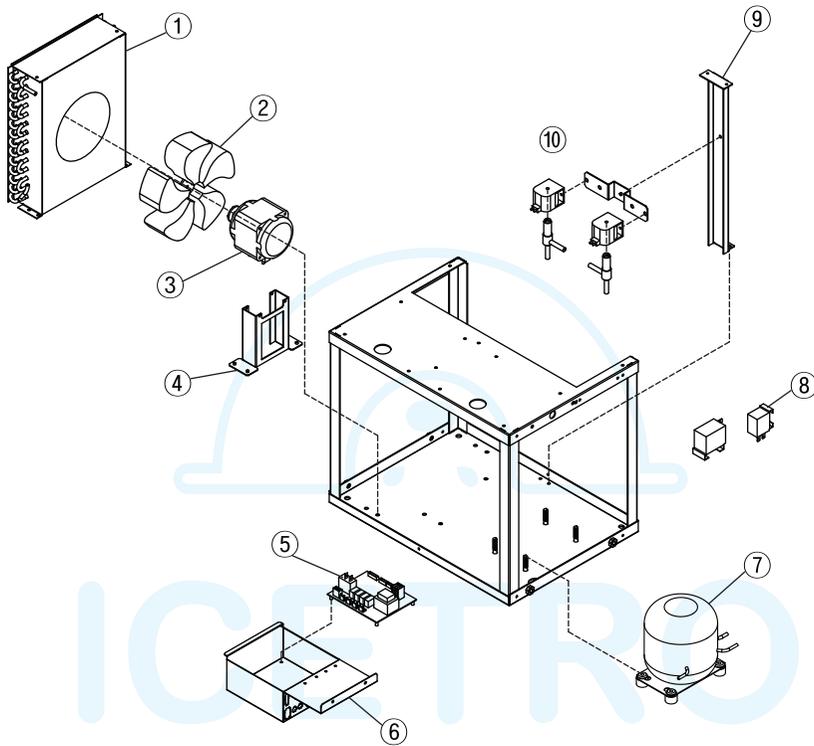


NO	ITEM	NO	ITEM
1	CONDENSER A' SSY	6	CONTROL BOX
2	FAN	7	COMP
3	BKT FAN MOTOR	8	TC
4	FAN MOTOR BKT	9	COLUMN BACK
5	PCB A' SSY	10	A' SSY SOLENOID VALVE






## SSM-52 OUT CASE ASSEMBLY

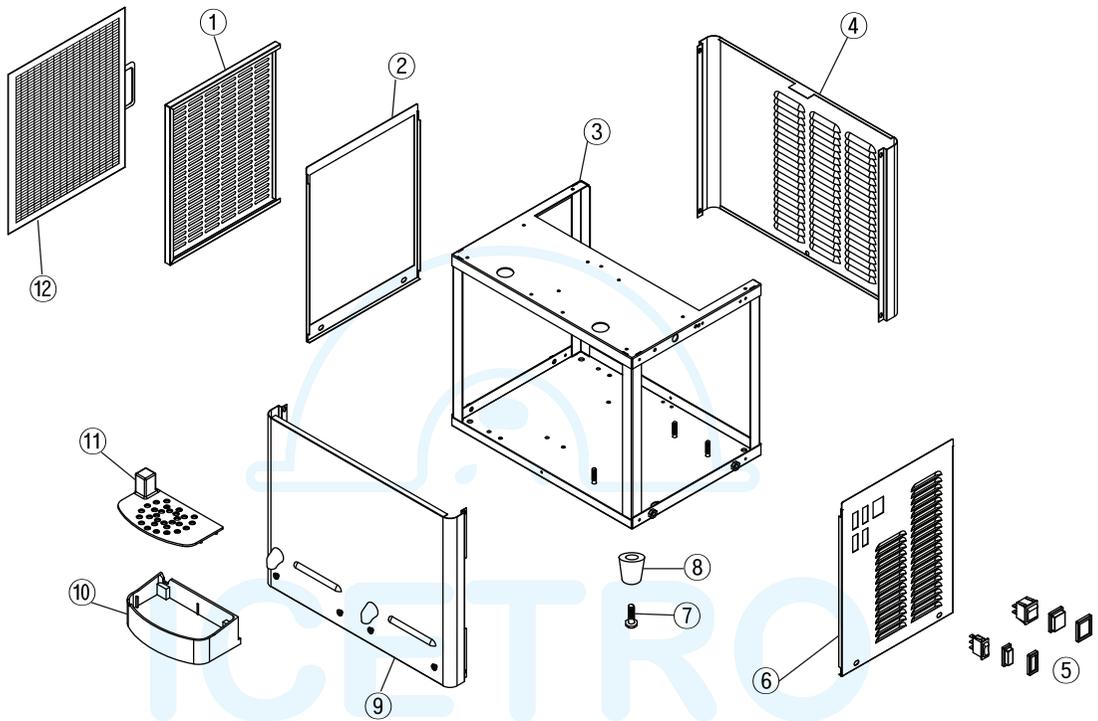

NO	ITEM	NO	ITEM
1	FILTER GUIDE	7	BOLT WRENCH
2	SIDE PANEL L	8	FOOT RUBBER
3	BASE PLATE	9	FRONT PANEL
4	BACK PANEL	10	DRAIN BOX
5	SWITCH A' SSY	11	DRAIN BOX COVER
6	SIDE PANEL R	12	FILTER



## SSM-180 IN CASE ASSEMBLY

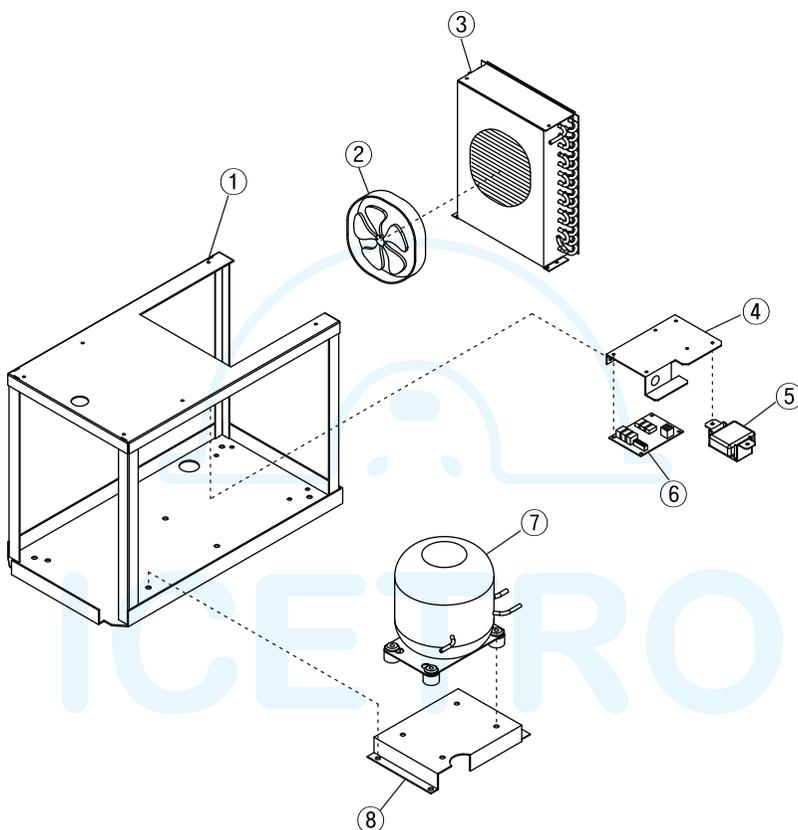


NO	ITEM	NO	ITEM
1	BASE PLATE	5	TRANS
2	FAN	6	PCB
3	CONDENSER A' SSY	7	COMP
4	BRACKET PCB MG	8	COMP BASE






## SSM-180 OUT CASE ASSEMBLY

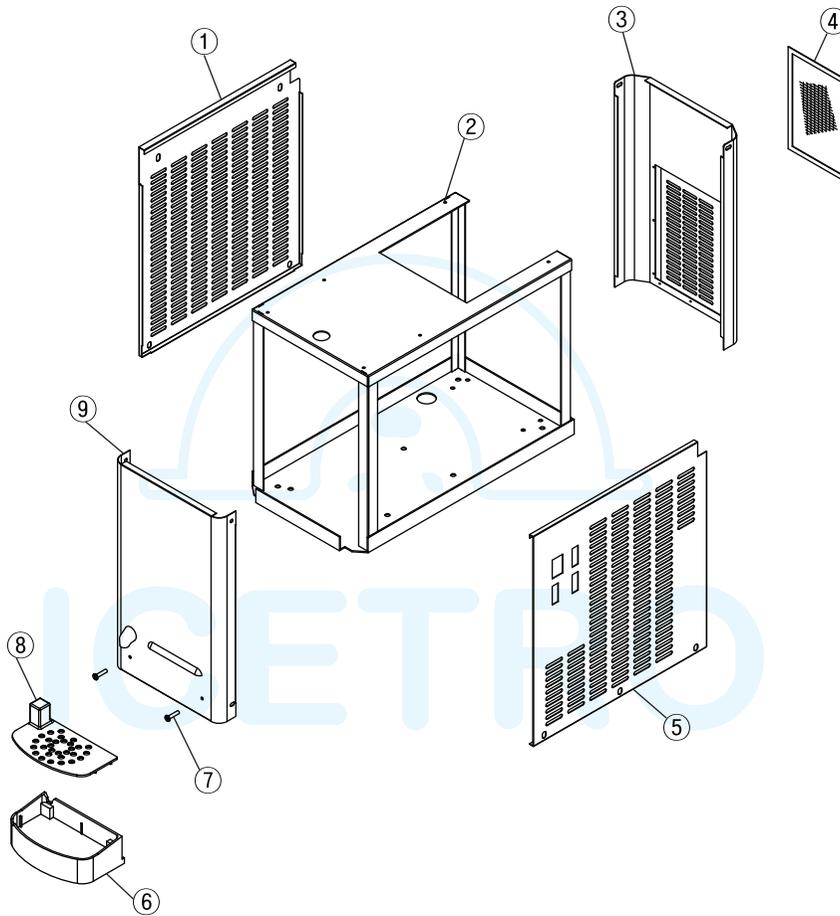

NO	ITEM	NO	ITEM
1	SIDE PANEL L	6	DRAIN BOX
2	BASE PLATE	7	DRAIN BOLT
3	BACK PANEL	8	DRAIN BOX COVER
4	FILTER	9	FRONT PANEL
5	SIDE PANEL R		



## SSM-280, 420 IN CASE ASSEMBLY

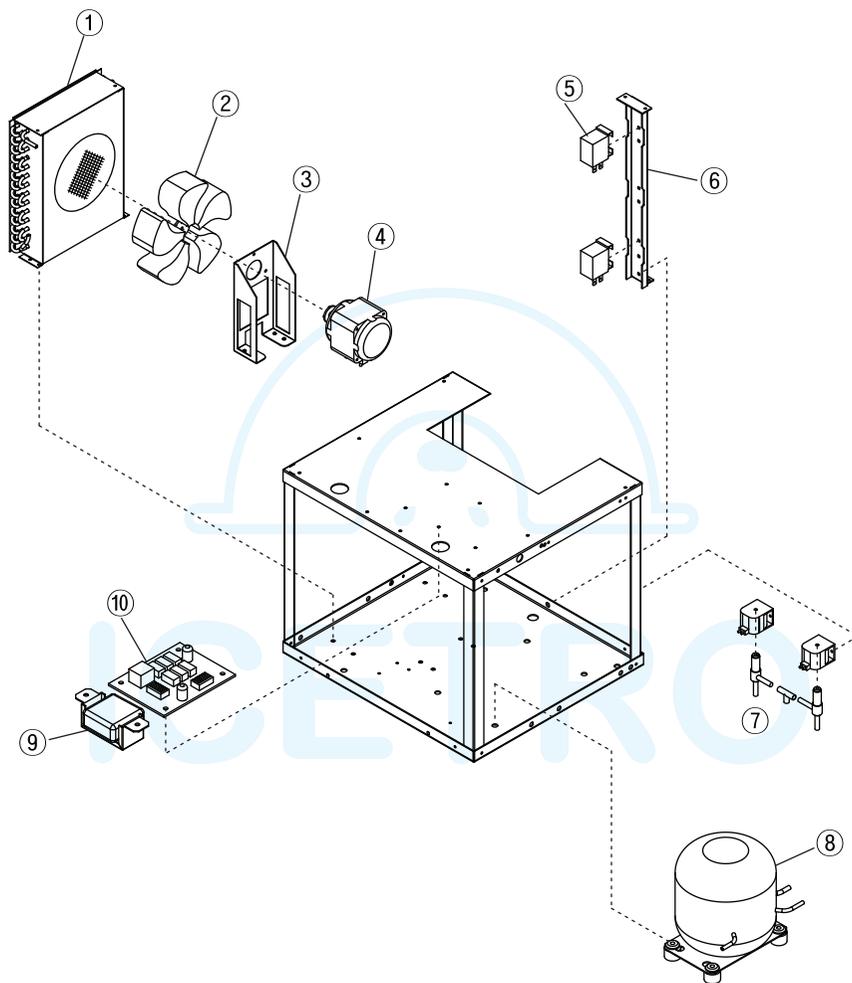


NO	ITEM	NO	ITEM
1	CONDENSER A' SSY	6	COLUMN BACK
2	FAN	7	ASS' Y SOLENOID VALVE
3	FAN MOTOR BKT	8	COMP
4	FAN MOTOR	9	TRANS
5	TC	10	PCB ASS' Y






## SSM-280, 420 OUT CASE ASSEMBLY

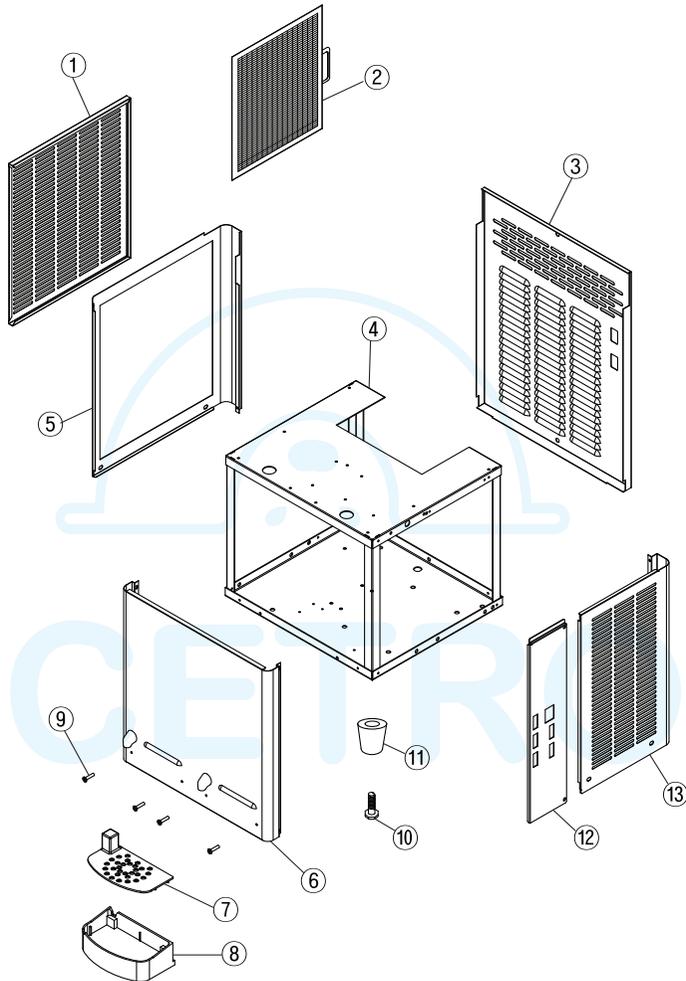

NO	ITEM	NO	ITEM
1	FILTER GUIDE	8	DRAIN BOX
2	FILTER	9	DRAIN BOLT
3	BACK PANEL	10	BOLT WRENCH
4	BASE PLATE	11	FOOT BUBBER
5	SIDE PANEL L	12	SIDE PANEL SWITCH
6	FRONT PANNEL	13	SIDE PANEL R
7	DRAIN BOX COVER		



## SSM-560 IN CASE ASSEMBLY

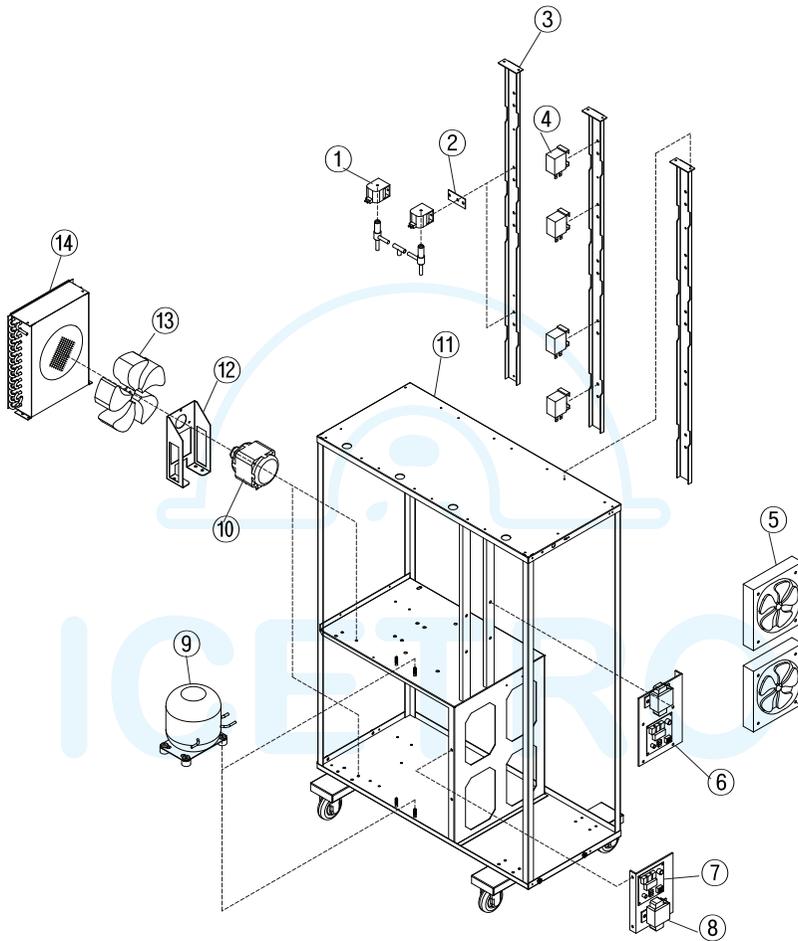


NO	ITEM	NO	ITEM
1	ASS'Y SOLENOID VALVE	8	TRANS
2	BKT SOL V/V	9	COMP
3	COLUMN BACK	10	FAN MOTOR
4	TC	11	BASE PLATE
5	AXIAL FAN	12	FAN MOTOR BKT
6	BKT PCB	13	FAN
7	PCB ASS'Y	14	CONDENSER A' SSSY






## SSM-560 OUT CASE ASSEMBLY

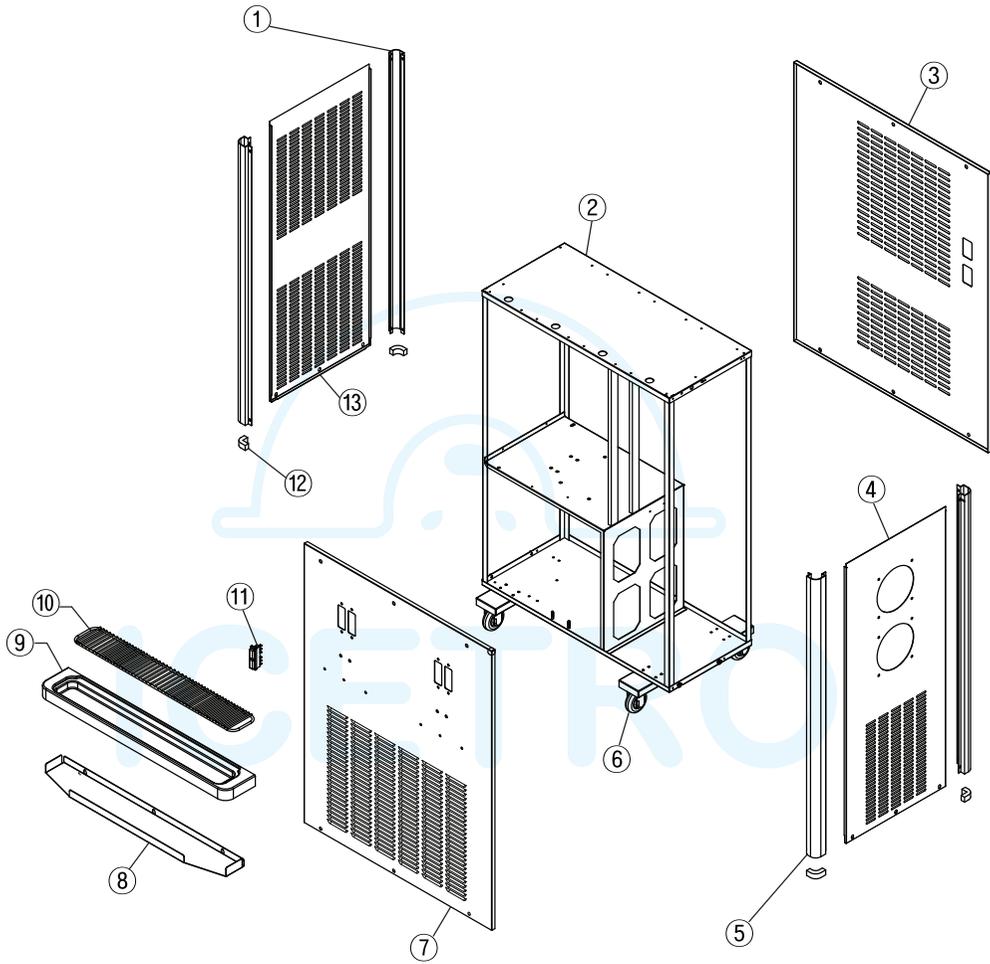

NO	ITEM	NO	ITEM
1	COLUMN COVER B-L	8	BRACKET DRAIN BOX
2	BASE PLATE	9	DRAIN BOX
3	BACK PANEL	10	DRAIN BOX UP
4	SIDE PANEL R	11	SWITCH ASS'Y
5	COLUMN COVER B-R	12	RUBBER
6	FOOT CASTER	13	SIDE PANEL L
7	FRONT PANEL		



## CANISTER ASSEMBLY

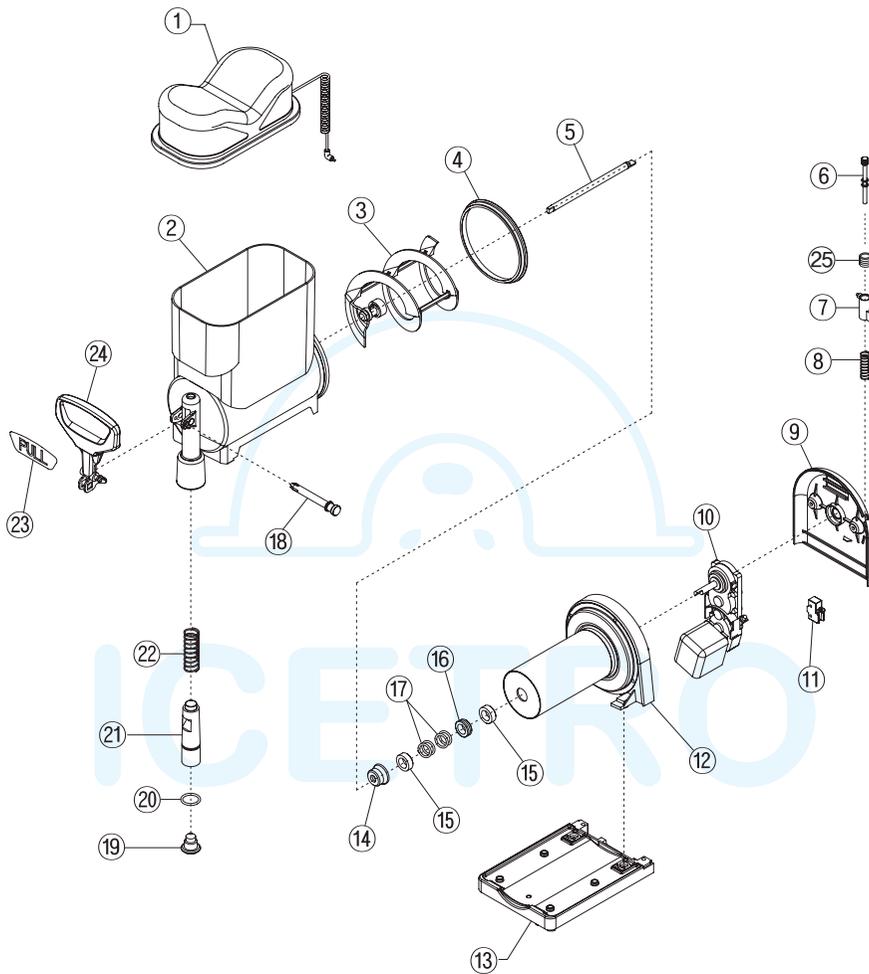

NO	ITEM	NO	ITEM	NO	ITEM
1	Canister Cover	10	Geared Motor	19	Packing Down
2	Canister	11	Micro switch	20	O-ring Down(Packing Pinston SSM-52)
3	Spiral	12	ASS'Y Drum	21	Lever Shaft
4	Packing Back	13	Base Canister	22	Lever Spring Slush(Lever Spring 52)
5	Dasher Shaft	14	Packing Cushion	23	Lever Label
6	Tension Bolt	15	Redenar	24	Lever
7	Joint Spring	16	Redenar Bushing	25	Insert Joint Spring
8	Motor Spring	17	Packing Redenar One/Two	26	
9	Motor Cover	18	Pin Lever	27	






## 13. When Receiving Service

---

1. A product failure has occurred while operation.




2. First turn off the power switch and remove the power plug.

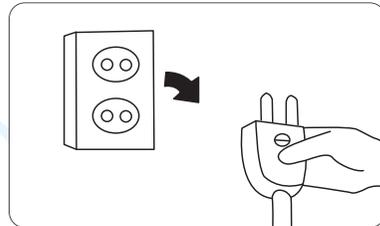

3. Contact the service agency.



4. The service engineer visits and performs service upon call.

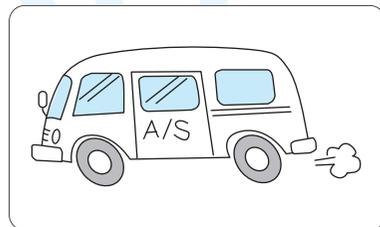

5. The repair is finished! !



6. When you are using the clover service of the manufacturer, the service history is logged in the system for more efficient services.



# MEMO

---





**ICETRO**

**SUPER SLUSH FREEZER**